GO REGULATOR, INC. **CC2** Series

Compact Two-stage Cylinder Pressure Regulator



The CC2 Series compact two-stage precision pressure regulator is well suited for instrumentation applications requiring a precise and stable delivery pressure. This regulator was originally designed to meet the needs of the instrumentation industry; however, it would also be very useful in many other applications that require a compact two-stage pressure regulator to supply a precise delivery pressure with fluctuating supply pressures.

Another benefit of using the CC2 Series is that internally, it shares some of its design features and options with the time proven CPR-1 Series pressure regulator. These features and options allow the customer to essentially tailor this regulator to accommodate virtually any application requiring low to moderate flow rates. The unit will also be offered with inlet/outlet pressure gauges, CGA connections and relief valves.

The CC2 Series regulator is manufactured in 316L stainless steel as a standard option. Please consult GO Regulator for any optional materials of construction that might be required for toxic or corrosive process gas applications.

Features & Specifications

- Compact size
- Two-stage regulation
- Stainless steel diaphragm
- Gas or liquid service
- Low internal volumes
- Maximum inlet pressure up to 3600 psig
- Outlet pressure ranges: 0-10 psig, 0-25 psig, 0-50 psig, 0-100 psig, 0-250 psig and 0-500 psig
- Cv flow coefficients: 0.06, 0.025, 0.2
- Leak rate, bubble-tight
- Operating temperatures: -40° F to +175° F $(-40^{\circ} \text{ C to } +80^{\circ} \text{ C})$
- Inlet/outlet connections: ½" FNPT

To Order, contact your local Distributor Link below: www.goreg.com/distributor/index.htm

Verify that your chosen part number is valid using the GO Wizards at www.goreg.com/products/matrix/index.htm


Fine adjust, 1/2" panel

Captured vent, tamperproof, stainless steel

mount, aluminum Fine adjust, 13/8" panel

mount, aluminum

How to Order

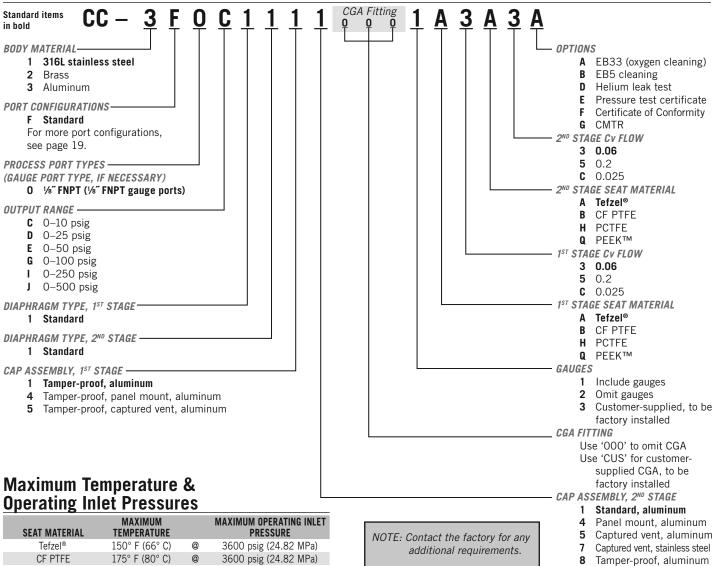

3600 psig (24.82 MPa) CF PTFE 175° F (80° C) 3600 psig (24.82 MPa) PEEK™ 175° F (80° C) @ **PCTFE** 175° F (80° C) 3600 psig (24.82 MPa)

Tefzel® is a registered trademark of the DuPont Company. PEEK™ is a trademark of Victrex PLC.

additional requirements.

Outline & Mounting Dimensions Weight = 2.1 lbs (0.95 kg)**STANDARD** VENT TO 5.07" (129mm) TMOSPHER 4.23" (107mm) 3.46" (88mm) 7.19" (183mm) 3.12" (79mm) 4.49" (114mm) OUTLET OUTLET INLET INLET STANDARD VENT TO ATMOSPHERE WITH CUSTOMER WITH FACTORY SUPPLIED 1-1/2" GAUGES **SUPPLIED 2" GAUGES**